

FAGOR PASS THROUGH DISHWASHER

FI-80B BT

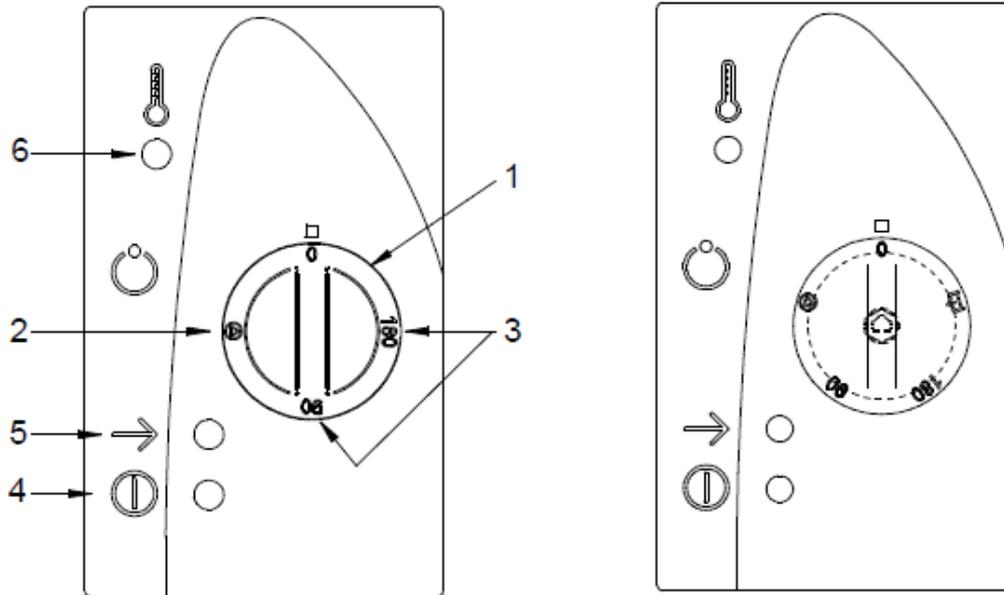


Fig. 8

2.- USE

FI - 80 , FI - 80 B BT, BYM - 1000 and EMP - 1000

- Lower the cover and turn the selector (1), (Fig. 9), to the preparation position (V) (2). The pilot light will come on (4) and the rinse and wash water will start to fill and heat up.
- When the pilot light comes on (6), the machine is ready.

FI - 100 , FI - 100 B, FI - 100 C, FI - 100 B BT, FI - 120, FI - 120 B, FI - 120 C

- Lower the cover and turn the selector (1), (Fig. 9), to the preparation position (V) (2). The pilot light will come on (3) and the rinse and wash water will start to fill and heat up. The machine is ready when the rinse thermostat (4) indicates 85 - 90°C and the wash thermostat (5) indicates 55 - 60°C
- The FI-80 B BT, FI-100 B, FI-100 B BT, FI-120 B, FI-120 C automatically drains in each cycle. To completely empty the tub, remove the anti-overflow device (fig. 16), set the switch (1) to the setting  (Fig. 10)

Wash cycles

The FI-80 and FI-80 B BT models have 2 cycles (3) lasting 90 and 180 seconds (Fig. 8). The pilot light (5) indicates the machine is working.

The FI – 100, FI – 100 B, FI – 100 C, FI-100 B BT, FI – 120, FI – 120 B, FI – 120 C models have 3 cycles (6) lasting 55, 75 and 120 seconds, as well as another indefinite one at the setting indicated by the number (8) on the selector (1), (Fig. 9). The pilot light (7) indicates the machine is working.

2.1.- Advice on how to wash correctly

- Put the amount of detergent indicated by the manufacture into the tub.
- Control and maintain the rinse aid level in the tank and the tube (T) with its filter submerged. (Fig. 11)